



GE: 02-21
TES:

SECTION:

FUSELAGE ENCLOSURE

DETAIL:

WINDSHIELD INSTALLATION

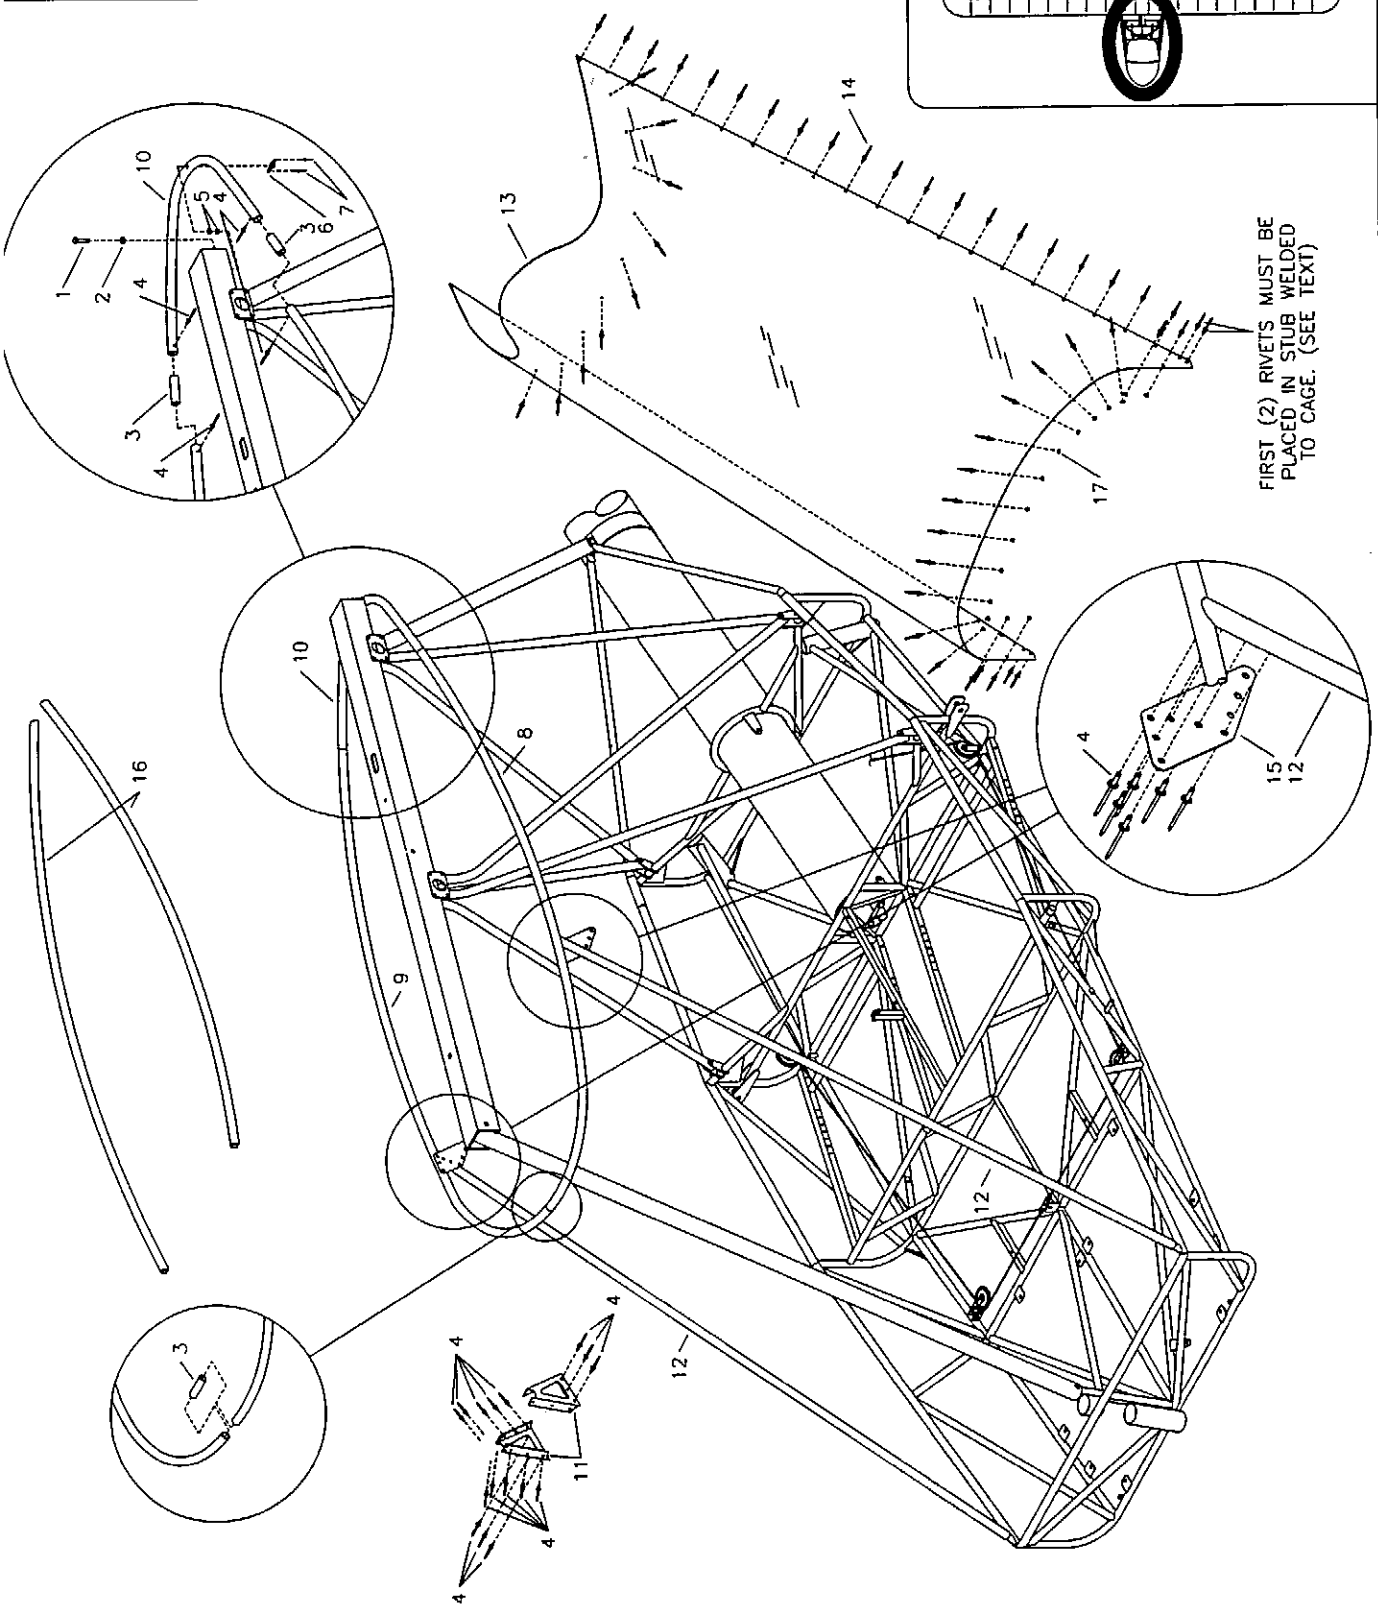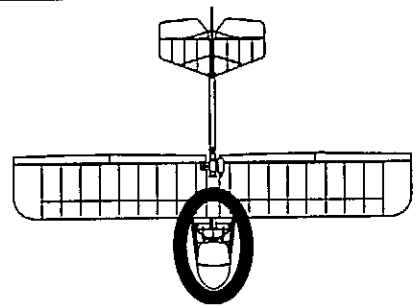

FIRST (2) RIVETS MUST BE PLACED IN STUB WELDED TO CAGE. (SEE TEXT)

MANUAL DRAWING #:
MD2414
DATE:
7/12/96

RANS
S-12 AIRAILE

Made in the
USA