

E: 03-03



ES:

SECTION:

INTERNAL SYSTEMS

DETAIL:

RUDDER PEDAL ASSEMBLY - WITHOUT TOE BRAKES

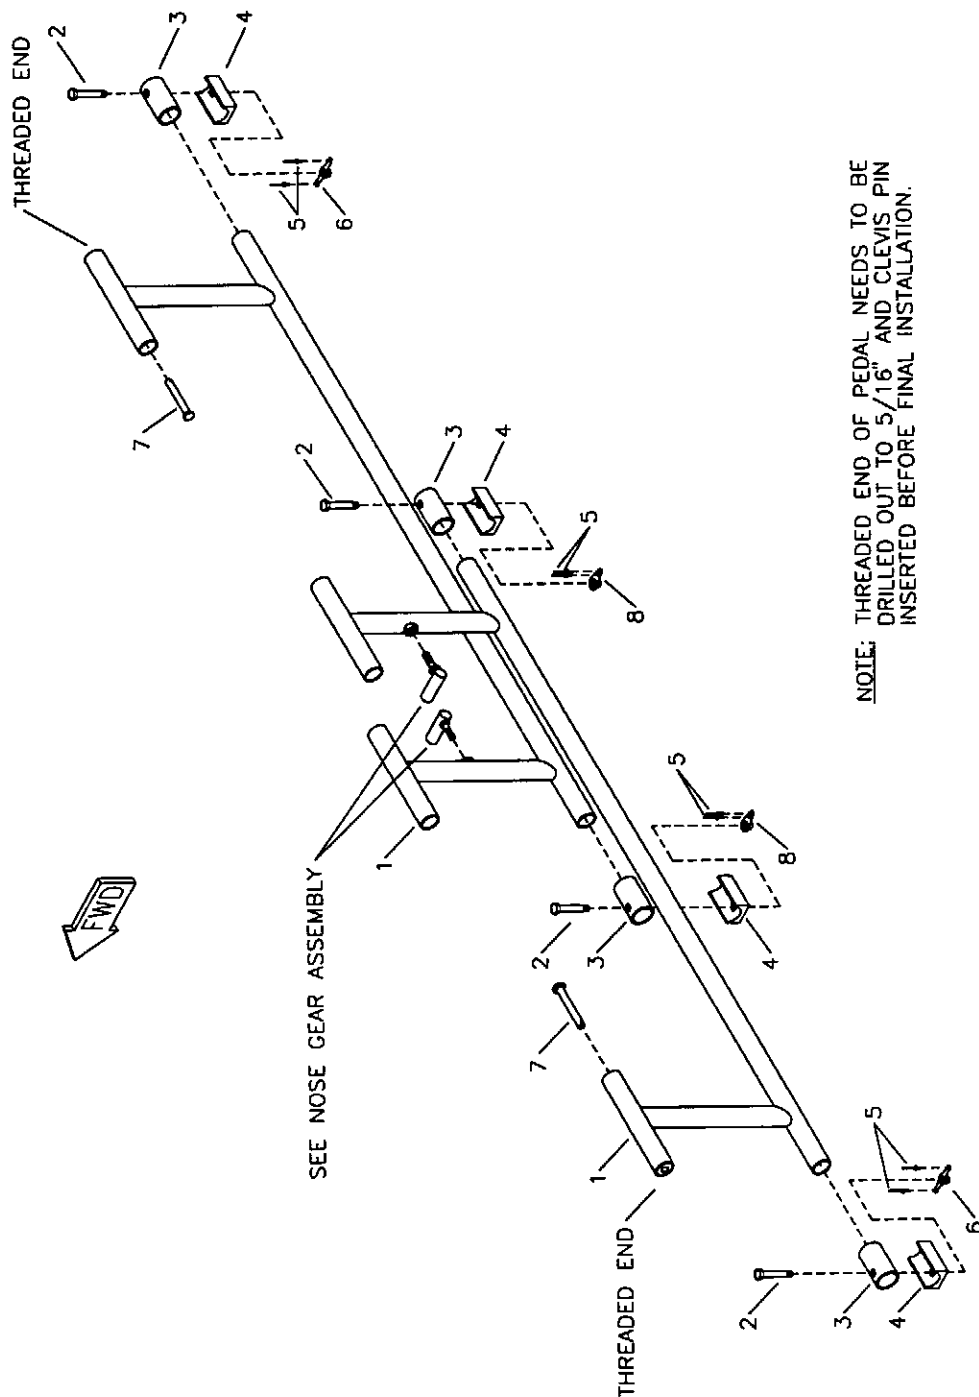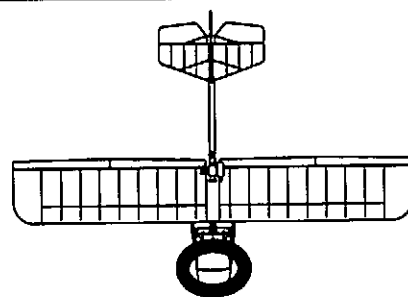

NOTE: THREADED END OF PEDAL NEEDS TO BE
DRILLED OUT TO 5/16" AND CLEVIS PIN
INSERTED BEFORE FINAL INSTALLATION.

MANUAL DRAWING #:
MD1917

DATE:
3/12/96

RANS
S-12 AIRAILE

Made in the
USA